

## Be sure to read this manual before use

# XPERIA 5 III

## SOG05

### Cautions on using the product

- In this manual, "Xperia 5 III" is usually referred to as "the product" or "main unit".
- In this manual, "Quick Start Guide", "Cautions on using the product" (this manual) and "取扱説明書 詳細版 (Full instruction manual)" (Japanese) are collectively referred to as "Instruction Manual".
- Descriptions in this manual are based on Android™ 11.
- In this manual, "microSD™ memory card (commercially available)", "microSDHC™ memory card (commercially available)" and "microSDXC™ memory card (commercially available)" are abbreviated as "microSD memory card".
- Company names and product names referred to in this manual are trademarks or registered trademarks of respective companies. The TM and ® marks may be omitted in this manual.

#### Follow the instructions of a gas station or other such location before using the product there.

Do not charge the product at a gas station, etc.

Take care not to drop the product at a gas station, etc.; in particular, do not use the product while filling.

Ignition of flammable gas might cause explosion, fire, etc.

#### If you notice anything unusual about the equipment such as an unusual odor, abnormal noise, smoke generation, overheating, discoloration or deformation during operation, charging or storage, perform the following measures carefully.

• Remove the power plug from an outlet

• Turn off the power of the product

Failure to do so might cause fire, burns, injury, electric shock, etc.

#### Caution Be sure to read the following cautions before use.

##### Do not use damaged product or peripheral devices.

Doing so might cause fire, burns, injury, etc.

##### Do not place the product on an unstable or inclined platform. Be careful especially when vibrator is set.

The product might fall and cause injury, etc.

##### Do not use or keep in a place that is very humid, dusty, or subject to high temperature.

Doing so might cause fire, burns, electric shock, etc.

For waterproofing/dustproofing, refer to "Notes on waterproof and dustproof properties" (▶P.26).

##### If children use the product, parents or guardians should give them proper instructions and do not allow them to use the product in the wrong way.

Use of the product in the wrong way might cause accidental ingestion, injury, electric shock, etc.

#### Never connect the USB Type-C plug to the product or the specified charging equipment (sold separately) when it is wet.

Although the product has the waterproof property, inserting USB Type-C plug to the product when it is wet might cause electric shock or short-circuit due to the moisture or foreign substance on the product or USB Type-C plug, or might cause abnormal overheating, fire damage, fire, burns, or a fault if corrosion occurs.

#### Do not touch the cable/charging terminal or power plug of the specified charging equipment (sold separately) with wet hands.

Doing so might cause fire, burns, electric shock, etc.

#### Use the adapter only on the specified power supply and voltage. When charging the battery overseas, use AC adapter that can be used overseas (sold separately).

Using the incorrect power supply and voltage might cause fire, burns, electric shock, etc.

#### Clean dust from the power plug.

Using it with dust adhered might cause fire, burns, electric shock, etc.

#### Firmly insert the specified charging equipment (sold separately) into an outlet.

Insecure inserting might cause fire, burns, electric shock, etc.

#### When you disconnect a power plug of the specified charging equipment (sold separately) from an outlet, do not apply excessive force to it such as pulling the cable. Instead, hold the adapter main unit to disconnect.

Pulling the cable of the specified charging equipment (sold separately) might damage the cable causing fire, burns, electric shock, etc.

### When using the product

- Before you start using the product, make sure to read the "Safety Precautions" to ensure correct use.
- Before you assume that the product is malfunctioning, refer to "故障とお考えになる前に (Check here first)" in "取扱説明書 詳細版 (Full Instruction Manual)" (Japanese).
- Communication is not possible even inside of the service area in places where the signal does not reach (e.g. tunnels and basements). Also, communication is sometimes not possible in poor signal reception areas. Communication is sometimes interrupted if you move into poor signal reception area during communication.
- Since the product uses radio waves, the possibility of communication intercepts by third parties cannot be eliminated. (Though 5G/LTE/WiMAX 2+ /GSM/UMTS system has highly secure confidential communication features.)
- For connecting to the emergency call acceptance organization, VoLTE (LTE network) is used. 3G (Line exchange network) connection is not available.
- Since the product is a radio station under the Radio Law, you may be asked to temporarily submit the product for inspection in accordance with the Radio Law.
- The IMEI information of your mobile phone is automatically sent to your carrier for maintenance and monitoring operational status of your mobile phone.
- Before you start using the product overseas, check the relevant laws and regulations of the country/region you visit.
- The Company is not liable for any damages arising from earthquakes, lightning, storms, floods or other natural disasters, as well as fires, actions by third parties, other accidents, intentional, mistaken, or incorrect use by the customer, or use under other unusual conditions outside the responsibility of the Company.
- The Company is not liable for any incidental damages (change/ disappearance of described content, loss of business income, disruption of business, etc.) arising from use of the product or inability to use the product.
- Some functions may be unavailable due to change of specification of the OS or change/termination of services.
- The Company is not liable for any damages arising from failure to observe the described content of the "Instruction Manual".
- The Company is not liable for any damages arising, for example, from malfunction caused by combination with connected devices or software not related to the Company.
- Captured image data or downloaded data may sometimes be altered or lost due to faults, repair or other handling of the product. The Company is not liable for any damage or lost income resulting from recovery of these data.

- It is recommended you keep a copy of important data on your PC's hard disk etc. Whatever the cause of the defect or malfunction may be, the Company assumes no responsibility for alteration or loss of saved data.
- Data saved in the product, such as images/videos, might be altered or lost by an accident, fault, repair or mishandling. Be sure to keep a copy of important contents. Note that the Company assumes no responsibility for any damages or lost profits resulting from altered or lost contents.
- Note that contents data (both charged or free content) saved to the product cannot be returned to the customer when the product is replaced for repair of a fault, for example.
- Although an afterimage may occur when a same screen has been displayed for a long time, it is not a malfunction. You are recommended to set the sleep time to a short one to avoid occurrence of afterimage and save the battery consumption.
- Since the product uses radio waves, the possibility of communication intercepts by third parties cannot be eliminated. (Though 5G/LTE/WiMAX 2+ /GSM/UMTS system has highly secure confidential communication features.)
- For connecting to the emergency call acceptance organization, VoLTE (LTE network) is used. 3G (Line exchange network) connection is not available.
- Since the product is a radio station under the Radio Law, you may be asked to temporarily submit the product for inspection in accordance with the Radio Law.
- The IMEI information of your mobile phone is automatically sent to your carrier for maintenance and monitoring operational status of your mobile phone.
- Before you start using the product overseas, check the relevant laws and regulations of the country/region you visit.
- The Company is not liable for any damages arising from earthquakes, lightning, storms, floods or other natural disasters, as well as fires, actions by third parties, other accidents, intentional, mistaken, or incorrect use by the customer, or use under other unusual conditions outside the responsibility of the Company.
- The Company is not liable for any incidental damages (change/ disappearance of described content, loss of business income, disruption of business, etc.) arising from use of the product or inability to use the product.
- Some functions may be unavailable due to change of specification of the OS or change/termination of services.
- The Company is not liable for any damages arising from failure to observe the described content of the "Instruction Manual".
- The Company is not liable for any damages arising, for example, from malfunction caused by combination with connected devices or software not related to the Company.
- Captured image data or downloaded data may sometimes be altered or lost due to faults, repair or other handling of the product. The Company is not liable for any damage or lost income resulting from recovery of these data.

- Before using this product, thoroughly read these safety precautions for proper use.
- These "Safety Precautions" describe instructions that should be observed to prevent damage to property or injury to the customer or others using the product.
- The following symbols indicate the different levels of injury or damage that may result if the guidelines are not observed and the product is used improperly.

	Danger	This symbol indicates that "death or serious injury" may directly and immediately result from improper use.
	Warning	This symbol indicates that "death or serious injury" may result from improper use.
	Caution	This symbol indicates that "minor injury" and/or "property damage" may result from improper use.

### Safety Precautions (Observe Strictly)

#### Precautions common to the main unit, internal battery, charging equipment, SIM card, peripheral devices

	Danger	Be sure to read the following hazards before use.
--	--------	---

- Do not use, store or leave the equipment in a location where it is subject to high temperature or accumulation of heat (e.g. by the fire, near a heater, under a kotatsu or bedding, in direct sunlight, in a car in the hot sun).

- Do not disassemble or modify the equipment.

Doing so might cause fire, burns, injury, electric shock, etc.

- Do not try to remove the internal battery from the product.

Doing so might cause fire, burns, injury, etc.

- Do not cover or wrap the equipment with a cloth or bedding in use or while charging.

Doing so might cause fire, burns, etc.

- If charging does not finish after specified time, stop charging.

Failure to do so might cause fire, burns, injury, etc. due to overcharge etc.

- Always turn off the product before you enter a place where flammable gas may be present, or a place where dusts are generated. Stop charging the product if you are charging it.

Ignition of flammable gas might cause explosion, fire, etc.

#### Explanation of graphic symbols

##### ■ Explanation of graphic symbols

###### Indicates an action that is not allowed.

###### Indicates that handling with wet hands is not allowed.

###### Indicates that disassembly is not allowed.

###### Indicates compulsory actions in accordance with instructions.

###### Indicates that use in a place where the product is likely to get wet or allowing the product to get wet is not allowed.

###### Indicates that the power plug must be disconnected from an outlet.

#### Do not subject the product to strong pressure or break the product. Especially when bringing the product putting in a pocket of clothes, do not let the product hit against surroundings or being put between the objects.

Doing so may cause fire, burns, injury, etc. due to damage of the internal battery.

#### Sitting or squatting with the product put in a pocket of trousers or skirt

Doing so might cause fire, burns, injury, etc. due to damage of the internal battery.

#### Stepping on the product on a soft object such as a sofa, bed or bedding, or on a floor

Doing so might cause fire, burns, injury, etc. due to damage of the internal battery.

#### Putting the product into a seat of train or bus

Doing so might cause fire, burns, injury, etc. due to damage of the internal battery.

#### Do not use, store or leave the equipment in a location where it is subject to high temperature or accumulation of heat (e.g. by the fire, near a heater, under a kotatsu or bedding, in direct sunlight, in a car in the hot sun).

Doing so might cause fire, burns, injury, electric shock, etc.

#### Do not try to remove the internal battery from the product.

Doing so might cause fire, burns, injury, etc.

#### Do not cover or wrap the equipment with a cloth or bedding in use or while charging.

Doing so might cause fire, burns, etc.

#### If charging does not finish after specified time, stop charging.

Failure to do so might cause fire, burns, injury, etc. due to overcharge etc.

#### Always turn off the product before you enter a place where flammable gas may be present, or a place where dusts are generated. Stop charging the product if you are charging it.

Ignition of flammable gas might cause explosion, fire, etc.

#### If the substance leaks out from the internal battery, do not allow the fluid to contact with your skin or face, hands, clothes, etc.

Doing so might cause injury etc. on your eyes or skin.

If the internal substance gets into your eyes, mouth, etc. or contacts your skin or clothes, immediately rinse with clean water.

In the case of getting into your eyes, mouth, etc., immediately consult a doctor after rinsing.

#### If the internal battery leaks or gives off a strange smell, immediately stop using and remove it from the vicinity of open flames.

The leaking liquid might ignite, catch fire, explode, etc.

#### Be careful not to allow a pet etc. to bite the product.

Depending on vehicle model, the radio waves from the product may affect the vehicle's electronic equipment to malfunction. In that case, stop using the product immediately.

#### If any skin abnormality develops due to the use of the product, immediately stop using the product, and consult a doctor.

Depending on your physical constitution or health, itchiness, a rash, eczema, etc. might develop.

See "Material list" (▶P.17) for materials used in each part of the product.

#### Magnetic components are used in the product's earpiece/speaker (center top), speaker (bottom left on back), and vibrator (bottom right on back); make sure no metal objects (cutter blade, staple, etc.) are attached to the product.

Attached objects might cause injury, etc.

#### Do not short-circuit the charging terminal while it is connected to an outlet. Do not touch the charging terminal with your hands, fingers, or any part of your body.

Doing so might cause fire, burns, electric shock, etc.

#### Do not place heavy objects on a cable of the specified charging equipment (sold separately), or do not apply unreasonable force to the cable such as pulling.

Doing so might cause fire, burns, electric shock, etc.

#### Do not contact metal objects to the specified charging equipment (sold separately) when connecting the plug to or disconnecting it from an outlet.

Doing so might cause fire, burns, electric shock, etc.

#### Do not connect the voltage converter (such as a travel converter for overseas travel) to the specified charging equipment (sold separately).

The product uses magnets; they may affect pacemakers, variable-pressure hydrocephalus shunts, and other medical devices. Do not bring the product near persons using these devices. If you use such a device, consult your doctor before using the product.

#### Do not put an excessive force to the connection part with the specified charging equipment (sold separately) connected to the product.

Doing so might cause fire, burns, electric shock, etc.

#### Watch the display in an adequately bright place taking a certain distance from it.

Watching in a dark place or closely might reduce visual acuity etc.

#### Charging equipment

##### Warning Be sure to read the following warnings before use.

#### Do not use the specified charging equipment (sold separately

**Main unit**  
● Since the battery is built into the product, you cannot replace it yourself. For replacing the battery, contact "お問い合わせ先 (For inquiries)" on "取扱説明書 (Full Instruction Manual)" (Japanese).

● Do not forcefully press, tap or intentionally subject the display to strong impact. Doing so might cause scratching or damage.

● Do not forcefully press the keys or display surface with your fingernails or hard objects. Doing so might cause scratching or damage of the keys or display.

● Do not use a remodeled product. Use of a modified device violates the Radio Law and Telecommunications Business Law.

The product is compliant with rules of the technical standard conformance of specified wireless equipment based on the Radio Law, Telecommunications Business Act, and as a proof of it, the Technical Compliance Mark (KC) can be checked with the product.

**Checking procedure: In the Home screen, slide the screen up → [Settings] → [About phone] → [Certificates]**

If modifications of the internal components of the product are made, the certification of conformity with the technical standard conformance etc. becomes invalid. Do not use the product with the certification invalid, as it is a violation of the Radio Law and Telecommunications Business Act.

● Take care not to place magnetized items such as magnetic cards, speakers and TV sets near the product, as it might cause a malfunction. Putting a strong magnetism close to the product might cause a false operation.

● Do not bring magnetized cards such as cash cards, credit cards and prepaid cards closer to the product. It might cause loss of the recorded data.

● When you put the product in your pocket or bag, take care that the display does not come in contact with metal objects or other hard objects, as it might cause a scratch or damage. Take care with a strap whose member is a hard material such as metal because it can touch the display and may cause scratch or damage.

● When suddenly brought into a warm place from a cold place, or when used in a humid location or in a place where temperature suddenly changes (e.g. near the air discharge port of an air conditioner), water droplets (i.e. condensation) may be formed inside of the product. Note that when used under such conditions, the humidity might cause corrosion or a malfunction.

● While writing or reading data to or from a microSD memory card, do not subject the product to vibration or impact, or turn off the power. Doing so might cause loss of data or a malfunction.

● Do not cover the proximity/light sensor with your finger or put a sticker on it. Doing so might hinder the proximity/light sensor from detecting the ambient brightness and functioning correctly.

● Do not put a sticker, etc. on the proximity/light sensor. Doing so might cause a malfunction on the sensor and make the display always turned off while receiving a call or during a call.

● Use the product with the cover of microSD memory card/SIM card slot firmly closed. If the cover is open, dirt or water might get inside and cause a malfunction.

● When carrying the product in your pocket or bag, take care not to put the touch panel close to metals or other conductive materials, as it might cause false operation of the touch panel.

**■ Organic EL display**

● Organic EL display may have partially dark part or the colors may be changed if a same image has been displayed for a long time, or the brightness of backlight is set to too bright, it has been used for a extremely long time. That is due to property of organic EL display and not a malfunction.

● Organic EL display is made with extremely advanced technology and it may have slightly missing pixels or pixels which are always lit. Also, it may have unevenness of color streak or brightness, or color change depending on direction you're looking. That is due to structure of organic EL display and not a malfunction. Please be forewarned.

● Do not give strong impact on the product such as dropping, throwing, stomping. Doing so might cause a malfunction.

● Do not put the product directly on sand at a beach etc. Sand or other small particles might get inside the earpiece/speaker, mouthpiece/microphone, speaker, or second microphone causing the volume to drop. If sand gets inside the product, it might cause a malfunction.

● To prevent possible hearing damage, do not listen at high volume levels for long periods.

● This mark is displayed when the surface temperature of the product rises during use. When the mark is displayed, there is a risk of burns if you continue using the product while holding it in your hands. In this case, please refrain from holding it in your hands.

● Subjecting an organic EL display to direct sunlight may cause a malfunction. Take care when placing at the window or outdoor.

**■ Display (Touch Panel)**  
● The touch panel is designed to be lightly touched by fingers. Do not apply strong pressure with your fingers or sharp-pointed objects (such as fingernails, ballpoint pens and pins) to the touch panel.

In the following cases, the touch panel might not respond. Also, it may cause a malfunction.

● Operation with gloves

● Operation with foreign object on the touch panel

● Operation with protective sheet or seal on the touch panel

● Operates when the display is wet with water droplet or fogged

● Operation with wet or sweaty fingers

● Operation under water

● Do not cover the proximity/light sensor with your finger or put a sticker on it. Doing so might hinder the proximity/light sensor from detecting the ambient brightness and functioning correctly.

● Do not put a sticker, etc. on the proximity/light sensor. Doing so might cause a malfunction on the sensor and make the display always turned off while receiving a call or during a call.

● Use the product with the cover of microSD memory card/SIM card slot firmly closed. If the cover is open, dirt or water might get inside and cause a malfunction.

● When carrying the product in your pocket or bag, take care not to put the touch panel close to metals or other conductive materials, as it might cause false operation of the touch panel.

**■ Internal battery**

**(The internal battery of the product is a lithium-ion battery)**

The internal battery is not fully charged at the time of purchase. Charge the internal battery before using the product. Charge the internal battery if you have not used the product for a long time.

● Use in very hot or cold environments, for example, when left in an automobile with the windows closed in summer, will cause the internal battery capacity to drop and shorten the available usage time. This will also shorten the internal battery's service life. Try to use the product as far as possible at room temperature.

● The internal battery gradually discharges after charging even if the product is not used. The internal battery might discharge completely after long time. Please be forewarned.

● The internal battery is a consumable part. If the performance of a battery does not recover (e.g. the usable time after each charge has become extremely short), the battery is at the end of service life, so stop use.

● Battery is not to be replaced. For replacement, contact "お問い合わせ先 (For inquiries)" on "取扱説明書 (Full Instruction Manual)" (Japanese).

And you might not use the product during certain period of time. Please be forewarned. Note that the length of service life varies depending on the usage condition etc.

● The internal battery sometimes swells up as they approach the end of its service life. This is due to the properties of lithium-ion batteries, and is not a problem in terms of safety.

**■ Charging equipment**

● Do not wrap the cable of the specified charging equipment (sold separately) around the main unit. Do not fold the plug or plug or connector part of the cable of the specified charging equipment (sold separately) forcibly. Do not place heavy objects on an adapter or cable, or do not apply unreasonable force such as pulling. Doing so might cause a malfunction.

● When unplugging the plug of the specified charging equipment (sold separately) from the outlet, hold and pull the power plug. If you pull the cable, the cable might be damaged.

● Please keep up important content recorded to the product or downloaded to the product from an outside source. Content recorded to the product sometimes disappears or is altered by unexpected factors, such as static electricity or a fault, repair, mishandling, etc.

**■ Camera**

● When photographing important occasions etc., take a trial shot and check the shot image to make sure it is correctly shot.

● Do not shoot in a place where shooting is prohibited.

**■ Copyrights and rights of portrait**

● You are not allowed to copy, distribute, publish, modify or edit the data you shot, recorded or downloaded using the product without consent of the copyright holder, except for personal use such as copying or quoting where provided for under the copyright law. In addition, do not use or modify photos or names of other individuals without the consent, as it might infringe on rights of portrait. Note that shooting and recording might be restricted at some live performances, shows and exhibitions even for personal use.

● Be careful about the copyright and portrait right when posting photos you shot etc. on Internet homepage.

**■ Backup content on the product**

● Please keep up important content recorded to the product or downloaded to the product from an outside source. Content recorded to the product sometimes disappears or is altered by unexpected factors, such as static electricity or a fault, repair, mishandling, etc.

**■ Cover of microSD memory card/SIM card slot**

● Make sure that the cover of microSD memory card/SIM card slot is firmly closed. Just a small part (a hair etc.) between contact surfaces can cause water intrusion or dust penetration.

● Do not open or close the cover of microSD memory card/SIM card slot if the product or your hands are wet.

● Do not sink the product in liquids other than tap water (seawater, pool water, water of hot spring, water with soap, detergent or bath salt contained, alcohol, juice, seasonings, etc.) or do not splash such liquid to the product. Also, do not use in a place where urine of pet animal is splashed. If it is splashed on the product, immediately wash the product with tap water.

**■ Notes on waterproof and dustproof properties**  
The product has a waterproof property equivalent to JIS waterproof grade (JIS C 0202 IPX5\*1 and IPX8\*2, as well as a dustproof property equivalent to JIS dustproof grade (IPEx8\*) on the condition that the cover of microSD memory card/SIM card slot is securely attached (based on in-house testing).

● You are responsible for any damage caused by inserting your SIM card into other IC card reader/writer etc.

Before using the product, thoroughly read important items to remember below. Note that the sections of the product which are described in the sections might cause intrusion of water, sand or other foreign material, resulting in overheating, ignition, electric shock, injury or a malfunction.

\*1 IPX5 equivalent means that the product will maintain its operability as a phone even if it is sprayed with water from a 6.3 mm diameter nozzle at a distance of about 3 meters for more than 3 minutes at a rate of about 12.5 liters per minute from any direction.

\*2 IPX8 equivalent means that the product will maintain its operability as a phone even if it is submerged with water from a 6.3 mm diameter nozzle at a distance of about 3 meters for more than 30 minutes at a depth of 1.5 meters for about 30 minutes.

\*3 IPX9 equivalent means that the product will securely maintain its function of no grit and dust getting inside the main unit even after it has been placed in an apparatus with grit and dust of diameters of 75  $\mu$ m or less and shaken for 8 hours.

Since operation of the product on each usage scene was confirmed based on the above assumption, proper operation of the product in every possible condition during actual use is not guaranteed. Malfunctions determined to be caused by mishandling by the customer are not covered by the warranty.

**■ Important items to remember before use**

● Make sure that the cover of microSD memory card/SIM card slot is firmly closed. Just a small part (a hair etc.) between contact surfaces can cause water intrusion or dust penetration.

● Do not open or close the cover of microSD memory card/SIM card slot if the product or your hands are wet.

● Do not immerse the product into a bathtub. The product is not resistant to high water temperatures.

● Do not wash the product in a washing machine or ultrasound bath.

● Do not drop the product into water.

● Do not use the product in water or other liquids.

● Do not use the product in a place where urine of pet animal is splashed. If it is splashed on the product, immediately wash the product with tap water.

● Do not use the product in a place where sand or dust is scattered.

● Do not use the product in a place where water or sand is splashed.

● Do not use the product in a place where water or sand is splashed.

● Do not use the product in a place where water or sand is splashed.

● Do not use the product in a place where water or sand is splashed.

● Do not use the product in a place where water or sand is splashed.

● Do not use the product in a place where water or sand is splashed.

● Do not use the product in a place where water or sand is splashed.

● Do not use the product in a place where water or sand is splashed.

● Do not use the product in a place where water or sand is splashed.

● Do not use the product in a place where water or sand is splashed.

● Do not use the product in a place where water or sand is splashed.

● Do not use the product in a place where water or sand is splashed.

● Do not use the product in a place where water or sand is splashed.

● Do not use the product in a place where water or sand is splashed.

● Do not use the product in a place where water or sand is splashed.

● Do not use the product in a place where water or sand is splashed.

● Do not use the product in a place where water or sand is splashed.

● Do not use the product in a place where water or sand is splashed.

● Do not use the product in a place where water or sand is splashed.

● Do not use the product in a place where water or sand is splashed.

● Do not use the product in a place where water or sand is splashed.

● Do not use the product in a place where water or sand is splashed.

● Do not use the product in a place where water or sand is splashed.

● Do not use the product in a place where water or sand is splashed.

● Do not use the product in a place where water or sand is splashed.

● Do not use the product in a place where water or sand is splashed.

● Do not use the product in a place where water or sand is splashed.

● Do not use the product in a place where water or sand is splashed.

● Do not use the product in a place where water or sand is splashed.

● Do not use the product in a place where water or sand is splashed.

● Do not use the product in a place where water or sand is splashed.

● Do not use the product in a place where water or sand is splashed.

● Do not use the product in a place where water or sand is splashed.

● Do not use the product in a place where water or sand is splashed.

● Do not use the product in a place where water or sand is splashed.

● Do not use the product in a place where water or sand is splashed.

● Do not use the product in a place where water or sand is splashed.

● Do not use the product in a place where water or sand is splashed.

● Do not use the product in a place where water or sand is splashed.

● Do not use the product in a place where water or sand is splashed.

● Do not use the product in a place where water or sand is splashed.

● Do not use the product in a place where water or sand is splashed.

● Do not use the product in a place where water or sand is splashed.

● Do not use the product in a place where water or sand is splashed.

● Do not use the product in a place where water or sand is splashed.

● Do not use the product in a place where water or sand is splashed.

● Do not use the product in a place where water or sand is splashed.

● Do not use the product in a place where water or sand is splashed.

● Do not use the product in a place where water or sand is splashed.

● Do not use the product in a place where water or sand is splashed.

● Do not use the product in a place where water or sand is splashed.

● Do not use the product in a place where water or sand is splashed.